


Sカン

S268

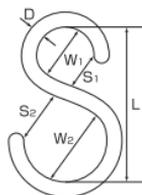


品番	D	L	W1	W2	S1	S2	重量(g)	使用荷重(kg)
S-2	2	19	7.5	7.5	3	3.5	1	3
S-2.5	2.5	22	9	12	5.5	7.5	2.3	5
S-3	3	30	9	16	5	10	4.4	7
S-4	4	36	13	19	6	11	10	15
S-5	5	43	14	23	6	11	18	20
S-6	6	50	15	25	7	12	29	30

(mm)

プチSカン

S270

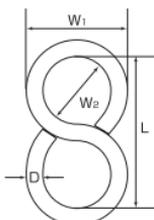


品番	D	L	W1	W2	重量(g)	使用荷重(kg)
SF-25	2.5	25	15	10	3	5
SF-30	3	24	16	10	4	7
SF-35	3.5	29	19	12	7	10
SF-40	4	34	22	14	10	15
SF-50	5	36	25	15	18	20

(mm)

ロングSカン

S880

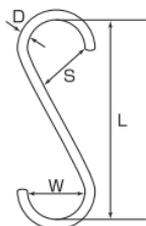


品番	D	L	W	S	重量(g)	使用荷重(kg)
SL-6×80	6	80	25	20	36	30
SL-6×120	6	120	35	29	40.8	30
SL-6×160	6	160	45	35	45	30
SL-6×200	6	200	47	42	50	30
SL-6×240	6	240	47	44	55	30

(mm)

ワリカン

S111

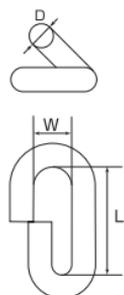

※使用方法



(mm)

品番	D	L	W	重量(g)	使用荷重(kg)
G-3	3	24	5	4	7
G-4	4	26	7	8	15
G-5	5	28	8	13	20
G-6	6	31	9	20	30
G-8	8	38	12	32	50